

# 1992 Protege (1.8L/SOHC)



TUNE-UP			COOLING SYSTEM & BELTS		
Item	Part Number	Remarks	Item	Part Number	Remarks
Spark Plug	BP01-18-110 <AN> <b>0000-18-BP01</b>	BKR5E-11	Water Pump	8AB7-15-010 <C> <b>B621-15-116A</b>	
Rotor	F220-18-V05A <AN> <b>F220-18-V05B</b>		Water Pump Gasket	B621-15-116A <AN> <b>B6BF-15-116</b>	
Cap	G609-18-V00 <A> <b>F220-18-V00A</b>		Thermostat	8AN1-15-171 <AN> <b>8AK1-15-171</b>	
Plug Wire Set	0000-18-119A		Thermo Gasket	B621-15-173	
Ignition Coil	B6S7-18-10XA		Radiator Hose	B366-15-186A	Upper
Igniter	BP01-18-251			B366-15-185A	Lower
EGI Control Box	BP10-18-881R	Reman.	Radiator Cap	D316-15-205	
Air Filter	B6S7-13-Z40 <AN> <b>B6S7-13-Z40 -9U</b>		Fan & Alternator Belt	B61H-18-381A <AN> <b>B61H-18-381A-9U</b>	
Fuel Filter	BP01-20-490A <AN> <b>BP01-13-480 -9U</b>		P/S Belt	B366-15-907 <AN> <b>B660-15-908</b>	w/o A/C
Oil Filter	B6Y1-14-302 <AN> <b>B6Y2-14-302</b>			B366-15-909 <AN> <b>B66S-15-909J</b>	w/ A/C
PCV Valve	B541-13-890A		Fan	FEH5-15-140 B61F-15-140	M/T A/T
<b>BRAKES &amp; WHEEL BEARINGS</b>			Fan Drive	B61H-15-150A B61F-15-150A	M/T A/T
Item	Part Number	Remarks	<b>CLUTCH PARTS</b>		
Brake Shoe Set	B5Y7-26-38Z	Rear	Item	Part Number	Remarks
Pad Set	B5Y6-33-28Z <A> <b>BCYW-33-28ZA-9F</b>	Front	Clutch Disc	B619-16-460 <A> <b>B631-16-460B-9U</b>	
Front Pad Attachment	B455-33-29Z <AN> <b>B4Y5-33-29Z</b>	Front	Clutch Cover	BP04-16-410 <AN> <b>BP04-16-410 -9U</b>	
Brake Drum	B596-26-251A <AN> <b>D102-26-251</b>	Rear	Release Collar	B315-16-510	
Brake Rotor	BR70-33-25X <A> <b>BR70-33-25XF</b>	Front	Master Cylinder	BR70-41-990 <A> <b>BR70-41-990A</b>	
Wheel Bearing	B455-33-047B <AN> <b>B455-33-047C</b>		Master Cylinder Kit	B312-41-52Z	
Oil Seal	G304-33-065	Front	Release Cylinder	B455-41-920	
Front Wheel Hub	B455-33-061 <A> <b>B01A-33-060A</b>		Release Cylinder Kit	FB01-49-460	
Rear Wheel Hub	B455-26-15XA		<b>DIFFERENTIAL</b>		
Caliper Assembly (R)	B462-33-980B <A> <b>B4Y2-33-98ZR</b>	Front	Item	Part Number	Remarks
Caliper Assembly (L)	B462-33-990B <A> <b>B4Y2-33-99ZR</b>	Front	Pinion Seal	F003-27-238A <AN> <b>F003-27-238B</b>	M/T
Caliper Seal Kit	B4Y5-33-24Z	Front		F001-27-238 <A> <b>F003-27-238B</b>	A/T
Wheel Cylinder	GJ21-26-610C <AN> <b>GJ21-26-610D</b>	Rear	Diff. Side Bearing	F001-27-350	
Wheel Cylinder Kit	B216-26-03Z	Rear	Trans. Filter	FU61-21-500B	
Master Cylinder	BR70-43-400C <A> <b>BR70-43-400D</b>	M/T	Trans. Gasket	FU60-21-512A <AN> <b>FU60-21-512B</b>	
	BR72-43-400C <C> <b>BR70-43-400D</b>	A/T	<b>ELECTRICAL</b>		
Master Cylinder Kit	BW0A-43-61Z		Item	Part Number	Remarks
Brake Hose	B455-43-980 <AN> <b>B455-43-980B</b>		Alternator	B366-18-300R <AN> <b>B366-18-300R-00</b>	Reman.
			Regulator	B366-18-W70	

ELECTRICAL—Cont'd			ENGINE PARTS—Cont'd		
Item	Part Number	Remarks	Item	Part Number	Remarks
Starter	B6S8-18-400R	M/T, Reman.	Oil Pan Gasket	B541-10-427	
	<AN> <b>B6S8-18-400R-00</b>			B541-10-428	
	FE1H-18-400R	A/T, Reman.	<b>FUEL &amp; EXHAUST SYSTEMS</b>		
	<AN> <b>FE1H-18-400R-00</b>		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Starter Clutch	B630-18-X45	M/T	Fuel Pump	B3E7-13-350	Pump Only
Starter Solenoid	FE1J-18-X10	M/T		<A> <b>B6BF-13-350</b>	
	E356-18-X10	A/T		B3E7-13-35ZB	Assembly
Ignition Switch	B455-66-151		Gas Cap	GN60-42-250	
	<AN> <b>B455-66-151A</b>		Front Pipe	BP04-40-500A	
Emission Ctrl. Switch	BP03-18-861B	Oxygen Sensor		<A> <b>BP04-40-500B</b>	
Oil Pressure Switch	B367-18-501		Catalytic Cnvr.	BPY1-20-600A	
Battery	0000-80-126F		Main Silencer	BP02-40-100G	
<b>ENGINE PARTS</b>			Pre-Silencer	BP01-40-300	
Item	Part Number	Remarks	Exhaust Gasket	B322-40-305	
Engine Gasket Set	8CBF-10-271		Rubber Hanger	RF03-40-061	
Valve Grind Set	8AB5-10-235		<b>LIGHTING</b>		
	<AN> <b>8DB5-10-235</b>		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Head Gasket	BP01-10-271		Brake & Tail Bulb	0000-11-1157	
	<AN> <b>BP26-10-271</b>		Turn Signal Bulb	0000-11-1156	
Valve Cover Gasket	BP01-10-235A		Back-Up Bulb	0000-11-1156	
Valve Guide (R)	B6Z0-10-280		License Plate Bulb	BR70-51-686	
Valve Guide (L)	B6Z0-10-290		Side Clearance Bulb	0000-11-0194	
Valve Seal	B660-10-155		High Mt. Brake Bulb	0000-11-0921	
	<AN> <b>KL02-10-155</b>		Dome Bulb	0000-11-3175	
Intake Valve	BP01-12-111			<A> <b>9970-05-080L</b>	
Exhaust Valve	BP01-12-121		Headlamp Bulb	0000-11-9004-90	
	<AN> <b>BP19-12-121</b>		<b>SHOCKS &amp; STEERING</b>		
Valve Spring	B541-12-125		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Rocker Arm	B541-12-130	Intake	Front Shock (R)	BR70-34-700D	
	B541-12-150	Exhaust		<AN> <b>BR70-34-700F</b>	
Camshaft	BP01-12-420B		Front Shock (L)	BR70-34-900D	
Cam Sprocket	B366-12-425			<A> <b>BR70-34-900F</b>	
Timing Belt	BP01-12-205A		Rear Shock (R)	BR70-28-700A	Normal Suspension
	<A> <b>BPY1-12-205</b>			<AN> <b>BR70-28-700A-9U</b>	
Tensioner	B630-12-700D			BW1N-28-700	Hard Suspension
	<AN> <b>B630-12-700E</b>		Rear Shock (L)	BR70-28-900A	Normal Suspension
Ring Set	BPY1-11-SC0			<AN> <b>BR70-28-900A-9U</b>	
Main Bearing Set	B6Y2-11-SG0			BW1N-28-900	Hard Suspension
Rod Bearing Set	B6Y0-11-SE0		Lateral Link (R)	BR70-28-620	
Rear Main Seal	BP05-11-312		Lateral Link (L)	BR70-28-630	
Oil Pump	B630-14-100F		Tie Rod End	8AB2-32-280	
Ring Gear	B367-11-502		Lower Arm (R)	BR70-34-300B	
Flywheel	BP01-11-500		Lower Arm (L)	BR70-34-350B	
Oil Filler Cap	8871-10-250A		Ctrl. Arm Bushing (R)	B455-34-46XA	
	<AN> <b>0453-10-250A</b>			<A> <b>BTAA-34-46X</b>	
Oil Cap Gasket	8871-10-252				
Intake Manifold Gasket	BP01-13-111				
Exhaust Manifold Gasket	BP01-13-460				
Camshaft Oil Seal	BP01-10-602				
	<AN> <b>BP01-10-602A</b>				
Crankshaft Oil Seal	BP05-11-312				

# 1992 Protege (1.8L/SOHC)



## SHOCKS & STEERING—Cont'd

Item	Part Number	Remarks
Ctrl. Arm Bushing (L)	B455-34-46YA <AN> <b>BTAA-34-46Y</b>	
Trailing Link (R)	BR70-28-200B	
Trailing Link (L)	BR70-28-250	
Ball Joint	B455-34-550	

## WIPERS & WASHERS

Item	Part Number	Remarks
Wiper Blade (R)	BR72-67-330 <AN> <b>NC11-67-330 -9U</b>	
Wiper Blade (L)	BR70-67-330A <AN> <b>BR70-67-330C</b>	
Wiper Insert (R)	BR72-67-331 <AN> <b>D040-67-333 -9U</b>	
Wiper Insert (L)	BR70-67-331 <AN> <b>B460-67-333</b>	
Wiper Arm (R)	BR71-67-321	
Wiper Arm (L)	BR70-67-321	
Washer Nozzle	BS06-67-510	
Washer Pump	S084-76-672	

TUNE-UP			BRAKES & WHEEL BEARINGS—Cont'd		
Item	Part Number	Remarks	Item	Part Number	Remarks
Spark Plug	BP03-18-110	BKR6E-11	Brake Hose	B461-43-980A	
	<AN> 0000-18-BP03			<A> B461-43-980C	
Rotor	F220-18-V05A		<b>COOLING SYSTEM &amp; BELTS</b>		
	<AN> F220-18-V05B		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Cap	BP05-18-V00		Water Pump	8AB8-15-010	
Plug Wire Set	0000-18-118A			<C> B621-15-116A	
Ignition Coil	B6S7-18-10XA		Water Pump Gasket	B621-15-116A	
Igniter	BP01-18-251			<AN> B6BF-15-116	
Control Box	BP10-18-881R		Thermostat	8AB8-15-171	
Air Filter	B6S7-13-Z40		Thermo Gasket	B621-15-173	
	<AN> B6S7-13-Z40 -9U		Radiator Hose	B6S7-15-186A	Upper
Fuel Filter	BP01-20-490A			B366-15-185A	Lower
	<AN> BP01-13-480 -9U		Radiator Cap	D316-15-205	
Oil Filter	B6Y1-14-302		Fan & Alternator Belt	B61H-18-381A	
	<AN> B6Y2-14-302			<AN> B61H-18-381A-9U	
PCV Valve	BP05-13-890		P/S Belt	B6S7-15-909	w/ A/C
<b>BRAKES &amp; WHEEL BEARINGS</b>			Fan	FEH5-15-140	M/T
<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>		B61F-15-140	A/T
Pad Set	BRY4-33-23Z	Front	Fan Drive	B61H-15-150A	M/T
	<AN> B0YW-33-28ZA-9F			B61F-15-150A	A/T
	E0Y8-26-43Z	Rear	<b>CLUTCH PARTS</b>		
	<AN> NAY9-26-43Z		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Front Pad Attachment	B455-33-29Z	Front	Clutch Disc	F867-16-460A	
	<AN> B4Y5-33-29Z			<AN> F867-16-460C-9U	
	E0Y8-26-43Z	Rear	Clutch Cover	BP01-16-410	
	<AN> NAY9-26-43Z			<AN> BP01-16-410 -9U	
Brake Rotor	BR74-33-25X	Front	Release Collar	FE84-16-510	
	<AN> B530-33-25XE		Master Cylinder	BR70-41-990	
	BR74-26-251A	Rear		<A> BR70-41-990A	
	<AN> BB4C-26-251C		Master Cylinder Kit	B312-41-52Z	
Wheel Bearing	B455-33-047A	Front	Release Cylinder	BR74-41-920	
	<AN> B455-33-047C			<AN> BR74-41-920A	
Oil Seal	G304-33-065	Front	Release Cylinder Kit	FB01-49-460	
Front Wheel Hub	B455-33-061		Clutch Pilot Bearing	F801-11-303	M/T
	<A> B01A-33-060A		<b>DIFFERENTIAL</b>		
Rear Wheel Hub	B455-26-15XA		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Caliper Assembly (R)	BR75-33-980A	Front	Pinion Seal	F003-27-238A	M/T
	<A> BRY4-33-98ZR			<AN> F003-27-238B	
Caliper Assembly (L)	BR75-33-990A	Front		F001-27-238	A/T
	<A> BRY4-33-99ZR			<A> F003-27-238B	
Caliper Seal Kit	B4Y5-33-24Z	Front	Diff. Side Bearing	0221-27-350	
Caliper Assembly (R)	BR76-26-980B	Rear	Trans. Filter	FU61-21-500B	A/T
	<A> BRY6-26-98ZR		Trans. Gasket	FU60-21-512A	
Caliper Assembly (L)	BR76-26-990B	Rear		<AN> FU60-21-512B	
	<A> BRY6-26-99ZR				
Caliper Seal Kit	BWYH-26-44Z	Rear			
	<A> GAYE-26-46ZB				
Master Cylinder	BR70-43-400C	M/T			
	<A> BR70-43-400D				
	BR72-43-400C	A/T			
	<C> BR70-43-400D				
Master Cylinder Kit	BW0A-43-61Z				

# 1992 Protege (1.8L/DOHC)



ELECTRICAL			ENGINE PARTS—Cont'd		
Item	Part Number	Remarks	Item	Part Number	Remarks
Alternator	B366-18-300R <AN> <b>B366-18-300R-00</b>	Reman.	Exhaust Manifold Gasket	BP05-13-460	
Regulator	B366-18-W70		Camshaft Oil Seal	F285-10-602 <A> <b>FS05-10-602A</b>	
Starter	B6S8-18-400R <AN> <b>B6S8-18-400R-00</b>	M/T, Reman.	Crankshaft Oil Seal	BP05-11-312	
	FE1H-18-400R <AN> <b>FE1H-18-400R-00</b>	A/T, Reman.	Oil Pan Gasket	B541-10-427 B541-10-428	
Starter Clutch	B630-18-X45	M/T	<b>FUEL &amp; EXHAUST SYSTEMS</b>		
Starter Solenoid	FE1J-18-X10 E356-18-X10	M/T A/T	<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Ignition Switch	B455-66-151 <AN> <b>B455-66-151A</b>		Fuel Pump	B3E7-13-350 <A> <b>B6BF-13-350</b>	Pump Only
Emission Ctrl. Switch	BP03-18-861B	Oxygen Sensor		B3E7-13-35ZB	Assembly
Oil Pressure Switch	B367-18-501		Gas Cap	GN60-42-250	
Battery	0000-80-126F		Front Pipe	BP04-40-500A <A> <b>BP04-40-500B</b>	
<b>ENGINE PARTS</b>			Catalytic Cnvr.	BPY1-20-600A	
<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>	Main Silencer	B684-40-100H <AN> <b>B684-40-100J</b>	
Engine Gasket Set	8CBA-10-271A <AN> <b>8CBA-10-271E</b>		Pre-Silencer	BP03-40-300 <AN> <b>B683-40-300C</b>	
Valve Grind Set	8AB6-10-235A <AN> <b>8AB6-10-235B</b>		Exhaust Gasket	B322-40-305	
Head Gasket	BP26-10-271		Rubber Hanger	RF03-40-061	
Valve Cover Gasket	BP05-10-235A <AN> <b>BP05-10-235C</b>		<b>LIGHTING</b>		
Valve Guide (R)	B6Z1-10-280		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Valve Guide (L)	BPY0-10-290		Brake & Tail Bulb	0000-11-1157	
Valve Seal	B660-10-155 <AN> <b>KL02-10-155</b>		Turn Signal Bulb	0000-11-1156	
Intake Valve	BP05-12-111		Back-Up Bulb	0000-11-1156	
Exhaust Valve	BP05-12-121 <AN> <b>BP05-12-121A</b>		License Plate Bulb	BR70-51-686	
Valve Spring	BP05-12-125		Side Clearance Bulb	0000-11-0194	
Camshaft	BP05-12-420A <AN> <b>BP05-12-420E</b>		High Mt. Brake Bulb	0000-11-0921	
Exhaust Camshaft	BP06-12-440A <A> <b>BP06-12-440C</b>		Dome Bulb	0000-11-3175 <A> <b>9970-05-080L</b>	
Cam Sprocket	B6S7-12-425A		Headlamp Bulb	0000-11-9004-90	
Timing Belt	B6S7-12-205B <AN> <b>B6S7-12-205D</b>		<b>SHOCKS &amp; STEERING</b>		
Tensioner	B660-12-700D <AN> <b>B660-12-700F</b>		<b>Item</b>	<b>Part Number</b>	<b>Remarks</b>
Ring Set	BPY1-11-SC0		Front Shock (R)	BR70-34-700D <AN> <b>BR70-34-700F</b>	
Main Bearing Set	B6Y2-11-SG0		Front Shock (L)	BR70-34-900D <A> <b>BR70-34-900F</b>	
Rod Bearing Set	B6Y0-11-SE0		Rear Shock (R)	BR70-28-700A <AN> <b>BR70-28-700A-9U</b>	Normal suspension
Rear Main Seal	BP05-11-312			BW1N-28-700	Hard suspension
Oil Pump	B660-14-100E			<AN> <b>B625-28-700A</b>	
Ring Gear	B367-11-502		Rear Shock (L)	BR70-28-900A <AN> <b>BR70-28-900A-9U</b>	Normal suspension
Flywheel	BP05-11-500			BW1N-28-900	Hard suspension
Oil Filler Cap	8871-10-250A <AN> <b>0453-10-250A</b>		Lateral Link (R)	BR70-28-620	
Oil Cap Gasket	8871-10-252			<AN> <b>B625-28-900A</b>	
Intake Manifold Gasket	BP05-13-111				

### SHOCKS & STEERING—Cont'd

Item	Part Number	Remarks
Lateral Link (L)	BR70-28-630	
Tie Rod End	8AB2-32-280	
Lower Arm (R)	BR70-34-300B	
Lower Arm (L)	BR70-34-350B	
Ctrl. Arm Bushing (R)	B455-34-46XA	
	<A> <b>BTAA-34-46X</b>	
Ctrl. Arm Bushing (L)	B455-34-46YA	
	<AN> <b>BTAA-34-46Y</b>	
Trailing Link (R)	BR70-28-200B	
Trailing Link (L)	BR70-28-250	

### WIPERS & WASHERS

Item	Part Number	Remarks
Wiper Blade (R)	BR72-67-330	
	<AN> <b>NC11-67-330 -9U</b>	
Wiper Blade (L)	BR70-67-330A	
	<AN> <b>BR70-67-330C</b>	
Wiper Insert (R)	BR72-67-331	
	<AN> <b>D040-67-333 -9U</b>	
Wiper Insert (L)	BR70-67-331	
	<AN> <b>B460-67-333</b>	
Wiper Arm (R)	BR71-67-321	
Wiper Arm (L)	BR70-67-321	
Washer Nozzle	BS06-67-510	
Washer Pump	S084-76-672	