

1993 Protege (1.8L/SOHC)



TUNE-UP			COOLING SYSTEM & BELTS		
Item	Part Number	Remarks	Item	Part Number	Remarks
Spark Plug	BP01-18-110 <AN> 0000-18-BP01	BKR5E-11	Water Pump	8AB7-15-010 <C> B621-15-116A	
Rotor	F220-18-V05A <AN> F220-18-V05B		Water Pump Gasket	B621-15-116A <AN> B6BF-15-116	
Cap	G609-18-V00 <A> F220-18-V00A		Thermostat	8AN1-15-171 <AN> 8AK1-15-171	
Plug Wire Set	0000-18-119A		Thermo Gasket	B621-15-173	
Ignition Coil	B6S7-18-10XA		Radiator Hose	B366-15-186A	Upper
Igniter	BP01-18-251			B366-15-185A	Lower
EGI Control Box	BP10-18-881R	Reman.	Radiator Cap	D316-15-205	
Air Filter	B6S7-13-Z40 <AN> B6S7-13-Z40 -9U		Fan & Alternator Belt	B61H-18-381A <AN> B61H-18-381A-9U	
Fuel Filter	BP01-20-490A <AN> BP01-13-480 -9U		P/S Belt	B366-15-907 <AN> B660-15-908	w/o A/C, w/ P.S.
Oil Filter	B6Y1-14-302 <AN> B6Y2-14-302			B366-15-909	w/ A/C
PCV Valve	B541-13-890A			<AN> B66S-15-909J	w/ A/C, w/o P.S.
			Fan	B366-15-908A	w/ A/C, w/o P.S.
			Fan Drive	FEH5-15-140	M/T
				B61F-15-140	A/T
				B61H-15-150A	M/T
				B61F-15-150A	A/T
BRAKES & WHEEL BEARINGS			CLUTCH PARTS		
Item	Part Number	Remarks	Item	Part Number	Remarks
Brake Shoe Set	B5Y7-26-38Z	Rear	Clutch Disc	B619-16-460 <A> B631-16-460B-9U	
Pad Set	B5Y6-33-28Z <A> BCYW-33-28ZA-9F	Front	Clutch Cover	BP04-16-410 <AN> BP04-16-410 -9U	
Front Pad Attachment	B455-33-29Z <AN> B4Y5-33-29Z	Front	Release Collar	B315-16-510	
Brake Drum	B596-26-251A <AN> D102-26-251	Rear	Master Cylinder	BR70-41-990 <A> BR70-41-990A	
Brake Rotor	BR70-33-25X <A> BR70-33-25XF	Front	Master Cylinder Kit	B312-41-52Z	
Wheel Bearing	B455-33-047B <AN> B455-33-047C		Release Cylinder	B455-41-920	
Oil Seal	G304-33-065	Front	Release Cylinder Kit	FB01-49-460	
Front Wheel Hub	B455-33-061 <A> B01A-33-060A		DIFFERENTIAL		
Rear Wheel Hub	B455-26-15XA		Item	Part Number	Remarks
Caliper Assembly (R)	B462-33-980B <A> B4Y2-33-98ZR	Front	Pinion Seal	F003-27-238A <AN> F003-27-238B	A/T
Caliper Assembly (L)	B462-33-990B <A> B4Y2-33-99ZR	Front		F001-27-238	M/T
Caliper Seal Kit	B4Y5-33-24Z	Front		<A> F003-27-238B	
Wheel Cylinder	GJ21-26-610C <AN> GJ21-26-610D	Rear	Diff. Side Bearing	F001-27-350	
Wheel Cylinder Kit	B216-26-03Z	Rear	Trans. Filter	FU61-21-500B	
Master Cylinder	BR70-43-400C <A> BR70-43-400D	M/T	Trans. Gasket	FU60-21-512B	
	BR72-43-400C <C> BR70-43-400D	A/T	ELECTRICAL		
Master Cylinder Kit	BW0A-43-61Z		Item	Part Number	Remarks
Brake Hose	B455-43-980 <AN> B455-43-980B		Alternator	B366-18-300R <AN> B366-18-300R-00	Reman.
			Regulator	B366-18-W70	

ELECTRICAL—Cont'd			ENGINE PARTS—Cont'd		
Item	Part Number	Remarks	Item	Part Number	Remarks
Starter	B6S8-18-400R	M/T, Reman.	Oil Pan Gasket	B541-10-427	
	<AN> B6S8-18-400R-00			B541-10-428	
	FE1H-18-400R	A/T, Reman.	FUEL & EXHAUST SYSTEMS		
	<AN> FE1H-18-400R-00		Item	Part Number	Remarks
Starter Clutch	B630-18-X45	M/T	Fuel Pump	B3E7-13-350	Pump Only
Starter Solenoid	FE1J-18-X10	M/T		<A> B6BF-13-350	
	E356-18-X10	A/T		B3E7-13-35ZB	Assembly
Ignition Switch	B455-66-151		Gas Cap	GN60-42-250	
	<AN> B455-66-151A		Front Pipe	BP04-40-500A	
Emission Ctrl. Switch	BP03-18-861B	Oxygen Sensor		<A> BP04-40-500B	
Oil Pressure Switch	B367-18-501		Catalytic Cnvr.	BPY1-20-600A	
Battery	0000-80-126F		Main Silencer	BP02-40-100G	
ENGINE PARTS			Pre-Silencer	BP01-40-300	
Item	Part Number	Remarks	Exhaust Gasket	B322-40-305	
Engine Gasket Set	8CBF-10-271			B323-40-305	
Valve Grind Set	8AB5-10-235		Rubber Hanger	RF03-40-061	
	<AN> 8DB5-10-235		LIGHTING		
Head Gasket	BP01-10-271		Item	Part Number	Remarks
	<AN> BP26-10-271		Brake & Tail Bulb	0000-11-1157	
Valve Cover Gasket	BP01-10-235A		Turn Signal Bulb	0000-11-1156	
Valve Guide (R)	B6Z0-10-280		Back-Up Bulb	0000-11-1156	
Valve Guide (L)	B6Z0-10-290		License Plate Bulb	BR70-51-686	
Valve Seal	B660-10-155		Side Clearance Bulb	0000-11-0194	
	<AN> KL02-10-155		High Mt. Brake Bulb	0000-11-0921	
Intake Valve	BP01-12-111		Dome Bulb	0000-11-3175	
Exhaust Valve	BP01-12-121			<A> 9970-05-080L	
	<AN> BP19-12-121		Headlamp Bulb	0000-11-9004-90	
Valve Spring	B541-12-125		SHOCKS & STEERING		
Rocker Arm	B541-12-130	Intake	Item	Part Number	Remarks
	B541-12-150	Exhaust	Front Shock (R)	BR70-34-700D	
Camshaft	BP01-12-420B			<AN> BR70-34-700F	
Cam Sprocket	B366-12-425		Front Shock (L)	BR70-34-900D	
Timing Belt	BP01-12-205A			<A> BR70-34-900F	
	<A> BPY1-12-205		Rear Shock (R)	BR70-28-700A	
Tensioner	B630-12-700D			<AN> BR70-28-700A-9U	
	<AN> B630-12-700E		Rear Shock (L)	BR70-28-900A	
Ring Set	BPY1-11-SC0			<AN> BR70-28-900A-9U	
Main Bearing Set	B6Y2-11-SG0		Lateral Link (R)	BR70-28-620	
Rod Bearing Set	B6Y0-11-SE0		Lateral Link (L)	BR70-28-630	
Oil Pump	BP02-14-100A		Tie Rod End	8AB2-32-280	
	<AN> BP02-14-100C		Lower Arm (R)	BR70-34-300B	
Ring Gear	B367-11-502		Lower Arm (L)	BR70-34-350B	
Flywheel	BP01-11-500		Ctrl. Arm Bushing (R)	B455-34-46XA	
Oil Filler Cap	8871-10-250A			<A> BTAA-34-46X	
	<AN> 0453-10-250A		Ctrl. Arm Bushing (L)	B455-34-46YA	
Oil Cap Gasket	8871-10-252			<AN> BTAA-34-46Y	
Intake Manifold Gasket	BP01-13-111		Trailing Link (R)	BR70-28-200B	
Exhaust Manifold Gasket	BP01-13-460				
Camshaft Oil Seal	BP01-10-602				
	<AN> BP01-10-602A				
Crankshaft Oil Seal	BP05-11-312				

1993 Protege (1.8L/SOHC)



SHOCKS & STEERING—Cont'd

Item	Part Number	Remarks
Trailing Link (L)	BR70-28-250	
Ball Joint	B455-34-550	

WIPERS & WASHERS

Item	Part Number	Remarks
Wiper Blade (R)	BR72-67-330	
	<AN> NC11-67-330 -9U	
Wiper Blade (L)	BR70-67-330A	
	<AN> BR70-67-330C	
Wiper Insert (R)	BR72-67-331	
	<AN> D040-67-333 -9U	
Wiper Insert (L)	BR70-67-331	
	<AN> B460-67-333	
Wiper Arm (R)	BR71-67-321	
Wiper Arm (L)	BR70-67-321	
Washer Nozzle	BS06-67-510	
Washer Pump	S084-76-672	

TUNE-UP			COOLING SYSTEM & BELTS		
Item	Part Number	Remarks	Item	Part Number	Remarks
Spark Plug	BP03-18-110 <AN> 0000-18-BP03	BKR6E-11	Water Pump	8AB8-15-010 <C> B621-15-116A	
Rotor	F220-18-V05A <AN> F220-18-V05B		Water Pump Gasket	B621-15-116A <AN> B6BF-15-116	
Cap	BP05-18-V00		Thermostat	8AB8-15-171	
Plug Wire Set	0000-18-118A		Thermo Gasket	B621-15-173	
Ignition Coil	B6S7-18-10XA		Radiator Hose	B6S7-15-186A	Upper
Igniter	BP01-18-251			B366-15-185A	Lower
Control Box	BP10-18-881R		Radiator Cap	D316-15-205	
Air Filter	B6S7-13-Z40 <AN> B6S7-13-Z40 -9U		Fan & Alternator Belt	B61H-18-381A <AN> B61H-18-381A-9U	
Fuel Filter	BP01-20-490A <AN> BP01-13-480 -9U		P/S Belt	B6S7-15-909	w/ A/C
Oil Filter	B6Y1-14-302 <AN> B6Y2-14-302		Fan	FEH5-15-140	M/T
PCV Valve	BP05-13-890			B61F-15-140	A/T
			Fan Drive	B61H-15-150A	M/T
				B61F-15-150A	A/T
BRAKES & WHEEL BEARINGS			CLUTCH PARTS		
Item	Part Number	Remarks	Item	Part Number	Remarks
Pad Set	BRY4-33-23Z <AN> B0YW-33-28ZA-9F	Front	Clutch Disc	F867-16-460A <AN> F867-16-460C-9U	
	E0Y8-26-43Z <AN> NAY9-26-43Z	Rear	Clutch Cover	BP01-16-410 <AN> BP01-16-410 -9U	
Front Pad Attachment	B455-33-29Z <AN> B4Y5-33-29Z	Front	Release Collar	FE84-16-510	
Brake Rotor	BR74-33-25X <AN> B530-33-25XE	Front	Master Cylinder	BR70-41-990 <A> BR70-41-990A	
	BR74-26-251A <AN> BB4C-26-251C	Rear	Master Cylinder Kit	B312-41-52Z	
Wheel Bearing	B455-33-047A <AN> B455-33-047C	Front	Release Cylinder	BR74-41-920 <AN> BR74-41-920A	
Oil Seal	G304-33-065	Front	Release Cylinder Kit	FB01-49-460	
Front Wheel Hub	B455-33-061 <A> B01A-33-060A		Clutch Pilot Bearing	F801-11-303	M/T
Rear Wheel Hub	B455-26-15XA				
Caliper Assembly (R)	BR75-33-980A <A> BRY4-33-98ZR	Front			
Caliper Assembly (L)	BR75-33-990A <A> BRY4-33-99ZR	Front			
Caliper Seal Kit	B4Y5-33-24Z	Front			
Caliper Assembly (R)	BR76-26-980B <A> BRY6-26-98ZR	Rear			
Caliper Assembly (L)	BR76-26-990B <A> BRY6-26-99ZR	Rear			
Caliper Seal Kit	BWYH-26-44Z <A> GAYE-26-46ZB	Rear			
Master Cylinder	BR70-43-400C <A> BR70-43-400D	M/T			
	BR72-43-400C <C> BR70-43-400D	A/T			
Master Cylinder Kit	BW0A-43-61Z				
Brake Hose	B461-43-980A <A> B461-43-980C				
			DIFFERENTIAL		
Item	Part Number	Remarks	Item	Part Number	Remarks
			Pinion Seal	F003-27-238A	A/T
				<AN> F003-27-238B	
				F001-27-238	M/T
				<A> F003-27-238B	
			Diff. Side Bearing	0221-27-350	
			Trans. Filter	FU61-21-500B	A/T
			Trans. Gasket	FU60-21-512B	
			ELECTRICAL		
Item	Part Number	Remarks	Item	Part Number	Remarks
			Alternator	B366-18-300R	Reman.
				<AN> B366-18-300R-00	
			Regulator	B366-18-W70	

1993 Protege (1.8L/DOHC)



ELECTRICAL—Cont'd			ENGINE PARTS—Cont'd		
Item	Part Number	Remarks	Item	Part Number	Remarks
Starter	B6S8-18-400R <AN> B6S8-18-400R-00 FE1H-18-400R <AN> FE1H-18-400R-00	M/T, Reman. A/T, Reman.	Crankshaft Oil Seal	BP05-11-312	
Starter Clutch	B630-18-X45	M/T	Oil Pan Gasket	B541-10-427 B541-10-428	
Starter Solenoid	FE1J-18-X10 E356-18-X10	M/T A/T	FUEL & EXHAUST SYSTEMS		
Ignition Switch	B455-66-151 <AN> B455-66-151A		Item	Part Number	Remarks
Emission Ctrl. Switch	BP03-18-861B	Oxygen Sensor	Fuel Pump	B3E7-13-350 <A> B6BF-13-350 B3E7-13-35ZB	Pump Only Assembly
Oil Pressure Switch	B367-18-501		Gas Cap	GN60-42-250	
Battery	0000-80-126F		Front Pipe	BP04-40-500A <A> BP04-40-500B	
ENGINE PARTS			Catalytic Cnvr.	BPY1-20-600A	
Item	Part Number	Remarks	Main Silencer	B684-40-100J	
Engine Gasket Set	8CBA-10-271A <AN> 8CBA-10-271E		Pre-Silencer	BP03-40-300 <AN> B683-40-300C	
Valve Grind Set	8AB6-10-235A <AN> 8AB6-10-235B		Exhaust Gasket	B322-40-305 B323-40-305	
Head Gasket	BP26-10-271		Rubber Hanger	RF03-40-061	
Valve Cover Gasket	BP05-10-235A <AN> BP05-10-235C		LIGHTING		
Valve Guide (R)	B6Z1-10-280		Item	Part Number	Remarks
Valve Guide (L)	BPY0-10-290		Brake & Tail Bulb	0000-11-1157	
Valve Seal	B660-10-155 <AN> KL02-10-155		Turn Signal Bulb	0000-11-1156	
Intake Valve	BP05-12-111		Back-Up Bulb	0000-11-1156	
Exhaust Valve	BP05-12-121 <AN> BP05-12-121A		License Plate Bulb	BR70-51-686	
Valve Spring	BP05-12-125		Side Clearance Bulb	0000-11-0194	
Camshaft	BP05-12-420A <AN> BP05-12-420E		High Mt. Brake Bulb	0000-11-0921	
Exhaust Camshaft	BP06-12-440A <A> BP06-12-440C		Dome Bulb	0000-11-3175 <A> 9970-05-080L	
Cam Sprocket	B6S7-12-425A		Headlamp Bulb	0000-11-9004-90	
Timing Belt	B6S7-12-205B <AN> B6S7-12-205D		SHOCKS & STEERING		
Tensioner	B660-12-700D <AN> B660-12-700F		Item	Part Number	Remarks
Ring Set	BPY1-11-SC0		Front Shock (R)	BR70-34-700D <AN> BR70-34-700F	
Main Bearing Set	B6Y2-11-SG0		Front Shock (L)	BR70-34-900D <A> BR70-34-900F	
Rod Bearing Set	B6Y0-11-SE0		Rear Shock (R)	BR70-28-700A <AN> BR70-28-700A-9U	
Oil Pump	B6S8-14-100C <A> B661-14-100		Rear Shock (L)	BR70-28-900A <AN> BR70-28-900A-9U	
Ring Gear	B367-11-502		Lateral Link (R)	BR70-28-620	
Flywheel	BP05-11-500		Lateral Link (L)	BR70-28-630	
Oil Filler Cap	8871-10-250A <AN> 0453-10-250A		Tie Rod End	8AB2-32-280	
Oil Cap Gasket	8871-10-252		Lower Arm (R)	BR70-34-300B	
Intake Manifold Gasket	BP05-13-111		Lower Arm (L)	BR70-34-350B	
Exhaust Manifold Gasket	BP05-13-460		Ctrl. Arm Bushing (R)	B455-34-46XA <A> BTAA-34-46X	
Camshaft Oil Seal	F285-10-602 <A> FS05-10-602A				

SHOCKS & STEERING—Cont'd

Item	Part Number	Remarks
Ctrl. Arm Bushing (L)	B455-34-46YA <AN> BTAA-34-46Y	
Trailing Link (R)	BR70-28-200B	
Trailing Link (L)	BR70-28-250	

WIPERS & WASHERS

Item	Part Number	Remarks
Wiper Blade (R)	BR72-67-330 <AN> NC11-67-330 -9U	
Wiper Blade (L)	BR70-67-330A <AN> BR70-67-330C	
Wiper Insert (R)	BR72-67-331 <AN> D040-67-333 -9U	
Wiper Insert (L)	BR70-67-331 <AN> B460-67-333	
Wiper Arm (R)	BR71-67-321	
Wiper Arm (L)	BR70-67-321	
Washer Nozzle	BS06-67-510	
Washer Pump	S084-76-672	