

# MAZDA MOTORSPORTS

## Installation Instructions




Mazda Miata  
V-Box Mount  
2006-2015

PN: ~~0000-07-FLTR-MT~~

# V-Box Mount - NC Installation Notes

1. Install gasket with window into flagtrrnics mount face down.
2. Drop V-Box into mount and center window gasket as necessary.
3. Place full gasket on back of V-Box. You may wish to lightly tape it in place so that it does not move during installation.
4. Slip fork (bottom of V-Box Mount) into the factory hole at the bottom of the package shelf on the passenger side.
5. Insert (2) M6x1 shoulder bolts through holes in V-Box bracket into chassis and tighten by hand.
6. Make sure the bracket and gaskets are aligned to your satisfaction.
7. Tighten the M6x1 bolts to chassis

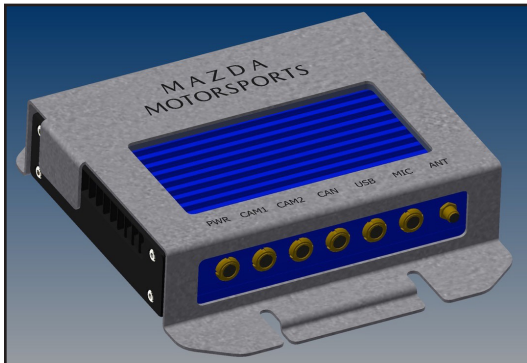

# Flagtronics Mount - NC Installation Notes

PN: 0000-04-5407-NC

1. Remove factory speaker grill. It just pops out.
2. If vehicle equipped remove speaker.
3. Remove both of the plastic speaker bolt plugs (Picture 1)
4. Re-install the plastic plugs you just removed upside down, so that the square head on the plug is on the bottom of the dash. (Picture 2)
5. Install Flagtronics unit with (4) supplied bolts, washers and nylock nuts to the mounting plate. Install plastic washers between the Flagtronics device and mounting plate as well as on the bottom between the unlock nut and mounting plate. Do not tighten nylock bolts at this point.
6. Place plate with Flagtronics unit loosely mounted to it into the recess on the dash. Do not install bolts at this time.
7. Get a rough idea of angle you want the Flagtronics unit to face and adjust accordingly until happy with the angle. Once happy with the angle, tighten the nylock nuts into place.
8. Once flagtronics unit is securely mounted to the plate in the proper orientation, place the plate with Flagtronics unit back into the recess in the dash.
9. Decide which existing defrost holes the Flagtronics harness wants to go through. It may be necessary to remove/trim one of the plastic defrost vent separators to turn two square vents into one rectangular vent to rough the Flagtronics harness through the dash.
10. Hand thread the (2) 8/32 tapered allen head screws down through the Flagtronics mounting plate and into the plastic plugs.
11. Install oversize washer and Nylock on bolts from underneath the dash.
12. Tighten nylocks. Be careful not to over tighten them as you will start to compress the plastic plugs and damage them. (Picture 3)

